

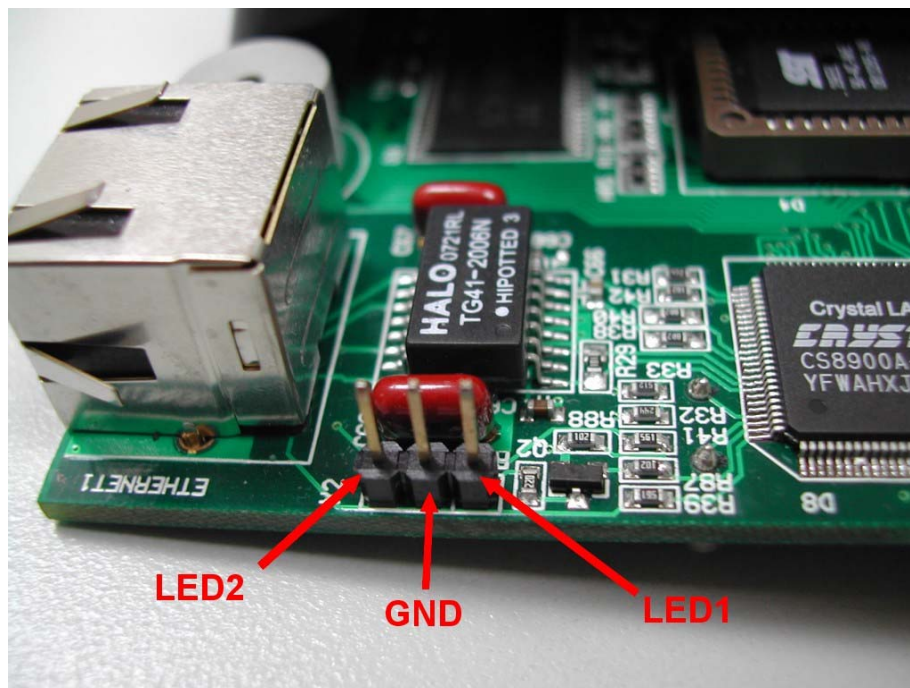


FS84 on-board peripheral and serial/UART connection


- Default IP address of all FS84s is 192.168.0.30
- Please use a cross network cable to connect FS84 to PC to change the network setting first if necessary.

Connection on FS84 for Peripheral Control in EthFAMex.exe

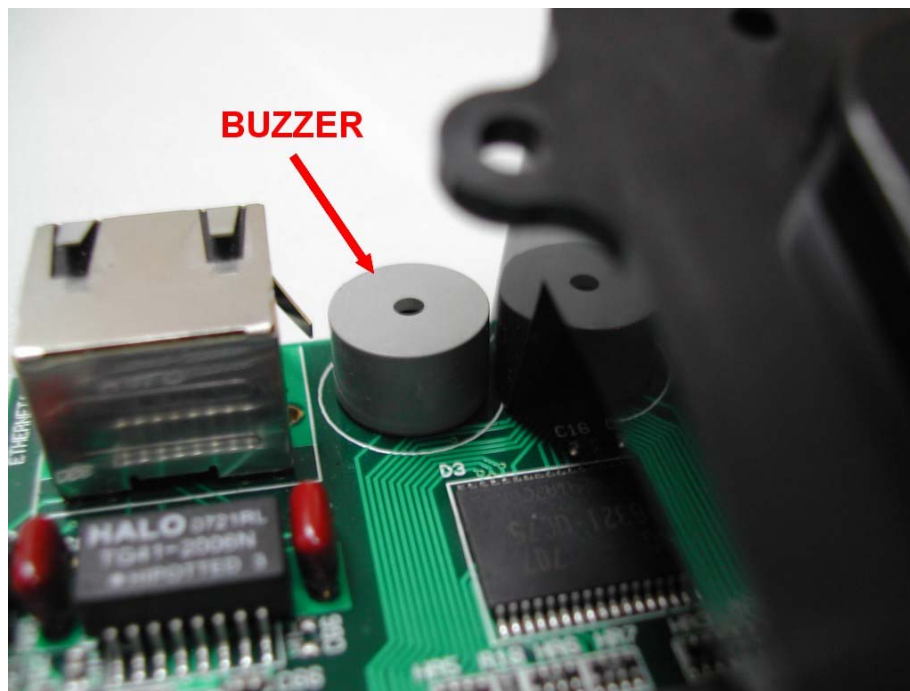

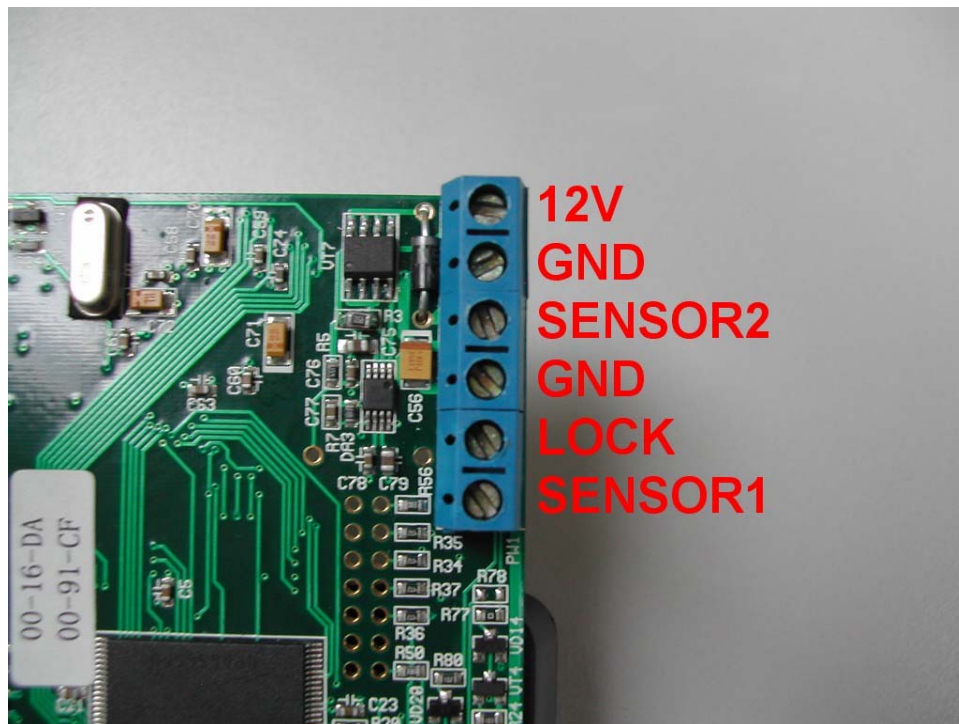

4 pin serial/UART port on FS84 ethFAM is available from a 10 pin connector

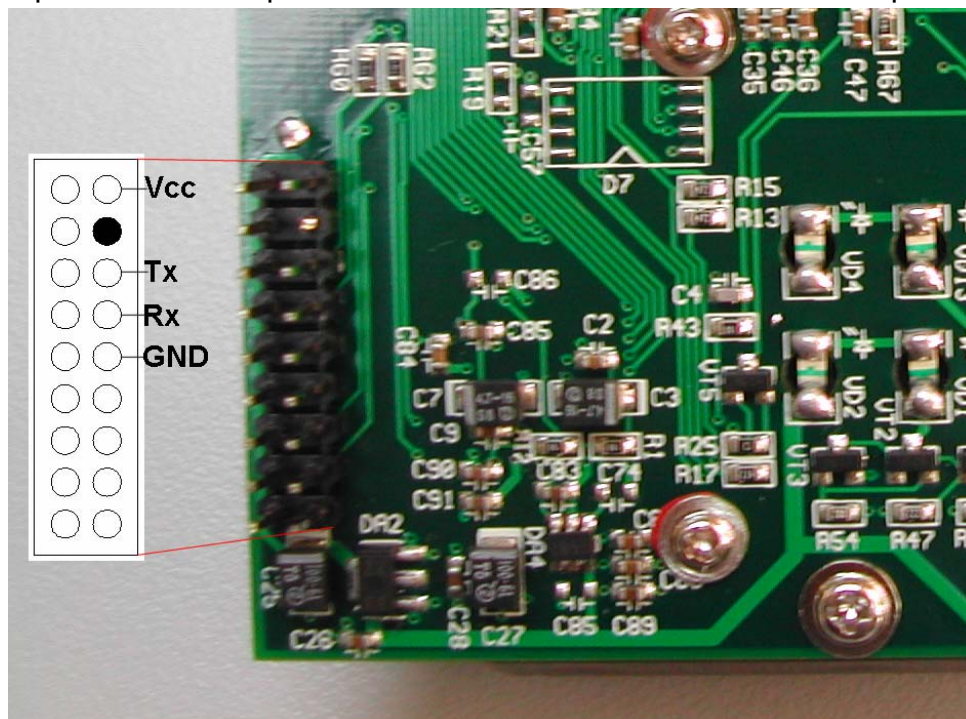

VCC = +5V

Tx = UART Transmit of FS84 ethFAM

Rx = UART Receive of FS84 ethFAM

GND = Ground